
Current converter integrated clamp type sensor and RMS converter $5A \sim 500A$




Model CTT-CLS-RMS series

[Features]

- Detection 50/60Hz distorted wave of commercial power supply as RMS value
- Output 4-20mADC instrumentation signal directly
- Extremely simple to mount with integrated mode of clamp type sensor and converter
- Corresponding to wide range of current from $0 \sim 5A$ to $0 \sim 500A$
- lacktriangle2 wires transmission system in common use of power supply (20V \sim 30V) of data logger and PCL

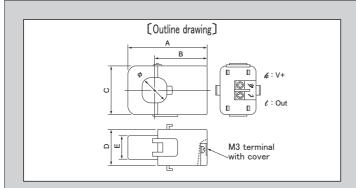

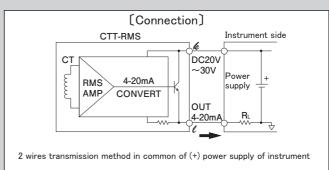

(Specification) Ta=25°C

Model		CTT-16-CLS- RMS5	CTT-16-CLS- RMS10	CTT-16-CLS- RMS25	CTT-16-CLS- RMS50	CTT-16-CLS- RMS100	CTT-24-CLS- RMS250	CTT-36-CLS- RMS500
Power supply		DC20 ~ 30V (25mA typ)						
Rating current		5 (Arms)	10 (Arms)	25 (Arms)	50 (Arms)	100 (Arms)	250 (Arms)	500 (Arms)
Output current		4 ~ 20mADC/0 ~ rating current (Recommended load resistor ≤600 Ω / at power supply 24V)						
Maximum current		120%(continuous), 150%(1min)						
Linearity		±2% FS (50/60Hz sine wave)						
Response time		100ms (typ)						
Output ripple		Within 5% of output						
Withstand voltage		AC2000V(50/60Hz), 1min (Core-output terminal in a lump)						
Insulation resistance		DC500V, \geq 100M Ω (Core-output terminal in a lump)						
Operating temperature		-20°C ~ +50°C , ≦80%RH,, no condensation, for indoor assembly, free direction for setting						
Storage temperature		-30°C ~ +90°C 、 ≦85%RH, no condensation						
Fitting repeatability		≃100 times						
Output terminal		2XM3 screw terminal with terminal cover						
Sqrew torque		0.3N · m						
Mass		approximately 75g					約200g	約290g
Dimension	A	55				74.5	91	
	В	40.5					49.5	61
	С	29.5					45	57
	D	31					34	40.5
	E	19					22	22
	ϕ	16					24	36

[Remark]

- (1) There is breakage of ferrite core inside with shocking force to the contact face(16 type)
- (2)Although core joint surface is protected from rust, in the case of rusting, possible to be recovered by removal of rust with CRC-556 (goods on the market) and paint it again. (24, 36 type)
- (3)Please use dedicated ones for the screws mounted on the output terminal